



Collingwood House
New Cavendish Street Door Entry
System
User Instructions

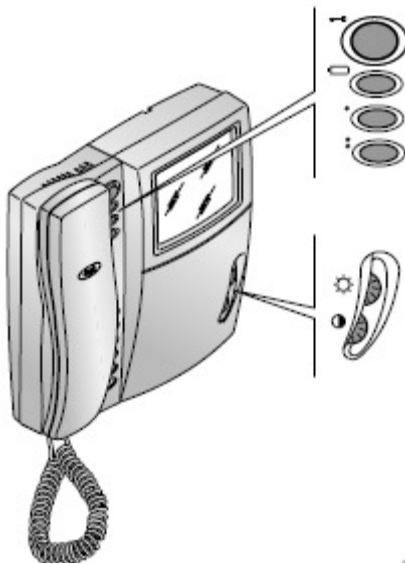
April 2008 issue 1

WELCOME

Congratulations on choosing a home fitted with a Blakeglow system.

 
 

This Owner's Guide is designed to help you get the most from your system.

For the latest product and technical information please visit our website:
www.blakeglow.com




BPT YV-YVC Audio/Visual Monitor

Push buttons and adjustments are as follows:-

- A) **HANDSET**
Allows communication with outdoor unit
- B) **PUSH BUTTON** 
For electrical door lock
- C) **PUSH BUTTON** •
Not used
- D) **PUSH BUTTON** ∴
Not used
- E) **BRIGHTNESS CONTROL KNOB** 
Internal potentiometer to adjust monitor brightness
- F) **CONTRAST** 
Internal potentiometer to adjust contrast

NOTES FOR USER:

- **WARNING—HIGH VOLTAGE** - Do not open or tamper with the set 
- Avoid impact or blows to the set since these could break the screen and lead to dangerous scattering of glass fragments
- In case of failure, modification or maintenance of the units (power supply etc.) contact only specialised technicians.

Visitors

Visitors may contact you from the main entrance by calling you on the door entry system. They would do this by dialling your apartment number on the call panel to call you.

Once the number has been dialled into the call panel, the number is displayed on the panel readout. Should your visitor dial the wrong number then they can reset and start again.

Visitors may be let in by pushing the key button on your audio visual unit.

Resident Pedestrian Access

You will be issued with proximity fobs which need to be offered to readers on controlled doors. Provided the code inside the fob has been programmed into the system, a signal would be sent to unlock the door. Except the main entrance where the reader is installed in the call panels all other readers are installed by each controlled door.

Lost Fobs

It is important that lost fobs are reported immediately so that they can be programmed out of the system



**Blakeglow Ltd
Unit A4
Hastingwood Trading Estate
35 Harbet Road
London N18 3HT**

**Tel : 020 8884 2495
Fax : 020 8345 5883
Email office@blakeglow.com
Web www.blakeglow.com**