




Oxygen Door Entry System B User Instructions

April 2008 issue 1

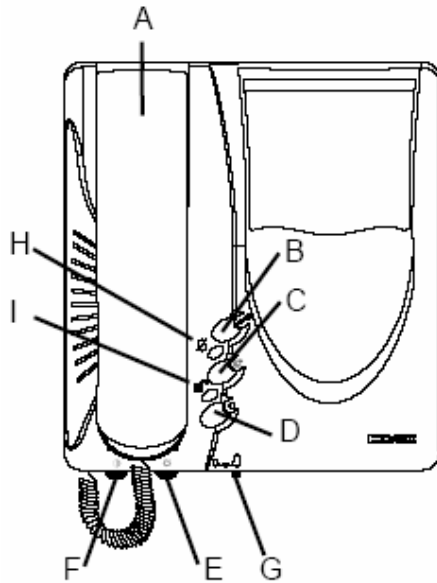

WELCOME




Congratulations on choosing a home fitted with a Blakeglow system.





This Owner's Guide is designed to help you get the most from your system.

For the latest product and technical information please visit our website:
www.blakeglow.com

Elvox Giotto 2002 Audio/Visual Monitor

Push buttons and adjustments are as follows:-

- A) HANDSET
Allows communication with outdoor unit
- B) PUSH BUTTON 
For electrical door lock
- C) PUSH BUTTON 
Not used
- D) PUSH BUTTON 
Not used

- E) BRIGHTNESS CONTROL  KNOB
Internal potentiometer to adjust monitor brightness
- F) CONTRAST 
Internal potentiometer to adjust contrast
- G) CALL TONE ADJUSTMENT
Four position slide to adjust the intensity of call tone or to exclude the call tone
- H) SIGNALLING FOR EXCLUDED CALL 
The lighting of the red LED indicates that the call is excluded (see point G).
- I) OPEN DOOR SIGNALLING 
The lighting of the green LED indicates that the door is open (the function is optional in relation to the type of installation).

NOTES FOR USER:



- WARNING—HIGH VOLTAGE - Do not open or tamper with the set
- Avoid impact or blows to the set since these could break the screen and lead to dangerous scattering of glass fragments
- In case of failure, modification or maintenance of the units (power supply etc.) contact only specialised technicians.



Visitors

Visitors may contact you from the main entrance by calling you on the door entry system. They would do this by dialling your apartment number on the call panel and pressing the “C” key to call you.

Once the number has been dialled into the call panel, the number is displayed on the panel readout. Should your visitor dial the wrong number then they can reset and start again by pressing the “R” button.

Visitors may be let in by pushing the key button on your audio visual unit (marked “G” overleaf).

Resident Pedestrian Access

You will be issued with proximity fobs which need to be offered to readers on controlled doors. Provided the code inside the fob has been programmed into the system, a signal would be sent to unlock the door. Except the main entrance where the reader is installed in the call panels all other readers are installed by each controlled door.



Lost Fobs

It is important that lost fobs are reported immediately so that they can be programmed out of the system

**Blakeglow Ltd
Unit A4
Hastingwood Trading Estate
35 Harbet Road
London N18 3HT**

**Tel : 020 8884 2495
Fax : 020 8345 5883
Email office@blakeglow.com
Web www.blakeglow.com**